
## patioSchwank control panel

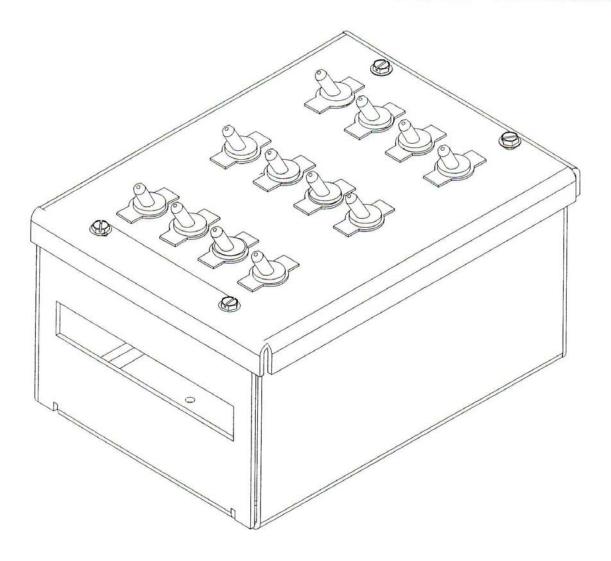

Ensure all low voltage wiring is properly installed as the wiring polarity is critical. To avoid system malfunction, ensure proper sizing and rating in the electrical system to maintain a minimum of 21.6 volts—26.4 volts at the Ignition Module.

Heaters can be installed individually using a single 40 VA Transformer, or in a multiple installations using a single Transformer sized adequately for the total VA load of the complete installation.

Each heater requires a 24 Volt, 40VA, Transformer when installed individually. When installed in a multiple installation, the first heater only requires 40 VA, and each additional heater requires 30 VA, up to a maximum of 16 heaters for each 500 VA transformer.

The best mode of control for each individual heater is by "ON/OFF" switch. If a thermostat is to be incorporated into the system it must be installed downstream of the control panel.

