

Amantii

ELECTRIC FIREPLACES

www.amantii.com

ELECTRIC FIREPLACES

SAFETY INFORMATION AND INSTALLATION MANUAL

**ZECL-26-2923, ZECL-30-3226, ZECL-33-3624, ZECL-39-4134,
ZECL-2939, INSERT-26-3825, INSERT-30-4026, INSERT-33-4230,
ZECL-26-FLUSHMT, ZECL-30-FLUSHMT**

Read these instructions completely before beginning installation. Failure to follow them could cause a heater malfunction and result in serious injury and/or property damage.

WARNING: All electric heaters have hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are stored.

WARNING: This heater is tested and listed for use only with the optional accessories listed in these instructions. Use of optional accessories not specifically tested for this heater could void the heater warranty and/or result in a safety hazard.



Keep this manual for future reference.

SAFETY INFORMATION

Due to high temperatures, the fireplace should be located out of traffic and away from furniture and draperies.

Do not place clothing or other flammable material on or near the fireplace. Never place any objects on the fireplace.

The fireplace can become very hot when running. Keep children and adults away from hot surfaces to avoid burns or clothing ignition. The fireplace will remain hot for a time after shutdown. Allow surfaces to cool before touching.

When using electrical heaters, basic precautions, like the ones listed below, should always be followed in order to reduce the risk of fire, electric shock and injury.

1. Read all instructions before using this heater.
2. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least three (3) feet from the front of the heater; keep them away from sides and rear as well.
3. Always unplug heater when it's not in use.
4. Do not operate the fireplace if it has a damaged cord or plug, after it has malfunctioned, or if the unit has been dropped or damaged in any way.
5. Do not use the heater outdoors.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never place the heater where it may fall into a bathtub or other water containers.
7. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners or anything else. Arrange the cord away from traffic areas where it could not be tripped over.
8. To disconnect the heater, turn the controls to "OFF" before removing the plug from the outlet.
9. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the heater.
10. To prevent a possible fire, do not block air intakes in any manner.
11. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
12. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

13. Avoid the use of an extension cord because the extension cord may overheat and cause a fire. If you have to use an extension cord, the cord should be No. 14 AWG minimum size and rated not less than 1875 WATTS.
14. Always use properly grounded fused and polarized outlets.
15. Always use ground fault protection where it is required by electrical codes.
16. Always disconnect the power before performing any cleaning, maintenance or relocation of the heater.
17. To prevent a possible fire, do not burn wood or other materials in this heater.
- 18 To prevent electric shock or fire, always use a certified electrician, should new circuits or outlets be required.
19. When transporting or storing the heater, keep it in a dry place, free from excessive vibration.

LISTING APPROVALS

This heater has been tested in accordance with the CSA Standards for fixed and location-dedicated electric room heaters in the United States. All components are UL or CSA safety certified.

Voltage/Hz	120VAC,60Hz
Watts:	1500Watts
Amps:	15Amps Grounded Circuit

Note: This heater must be electrically wired and grounded in accordance with local codes or, in the absence of local codes, with National Electric Code.

PRODUCT DIMENSION

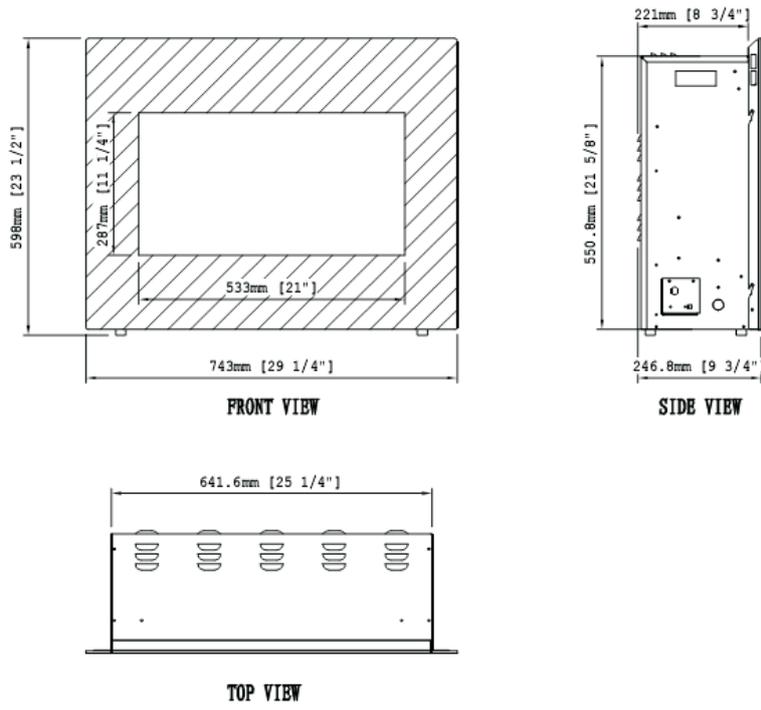


Figure 1 ZECL-26-2923 dimensions

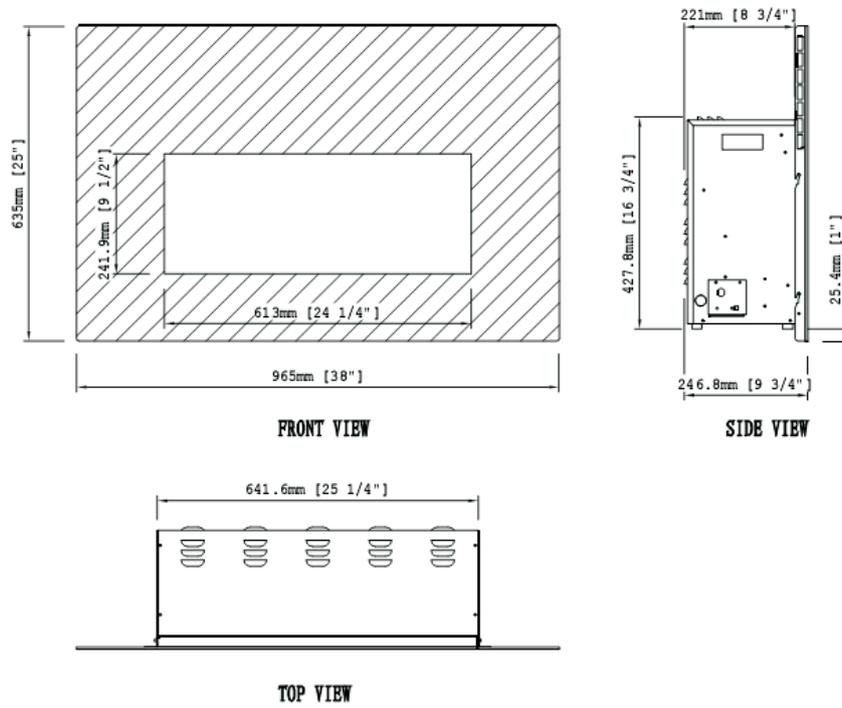


Figure 2 INSERT-26-3825 dimensions

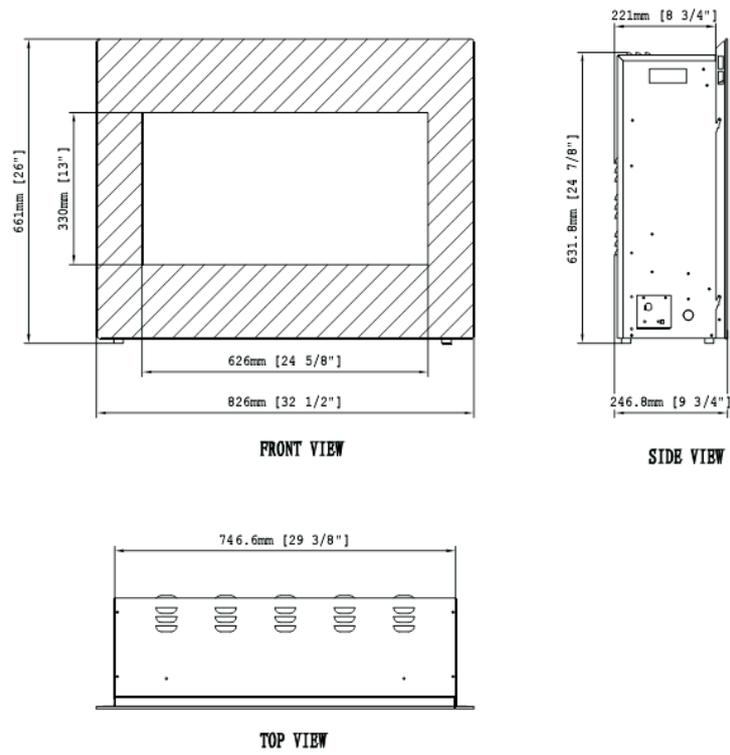


Figure 3 ZECL-30-3226 dimensions

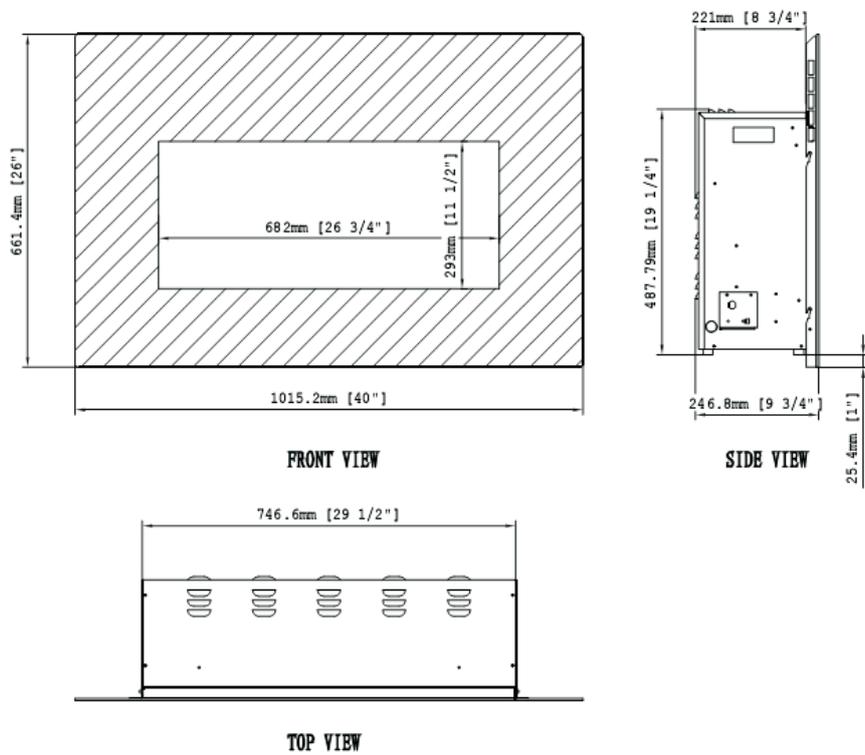


Figure 4 INSERT-30-4026 dimensions

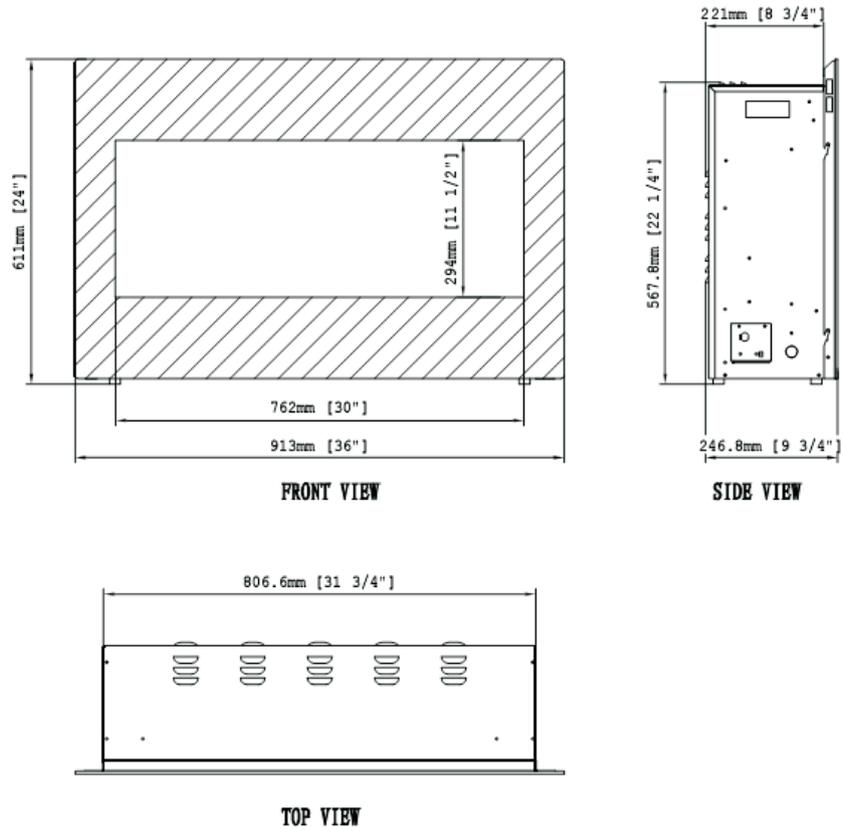


Figure 5 ZECL-33-3624 dimensions

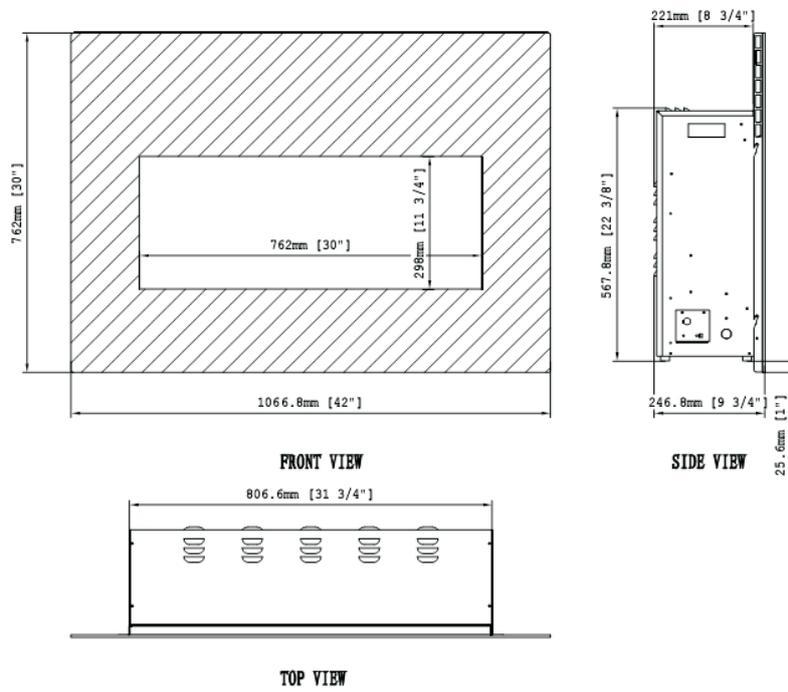


Figure 6 INSERT-33-4230 dimensions

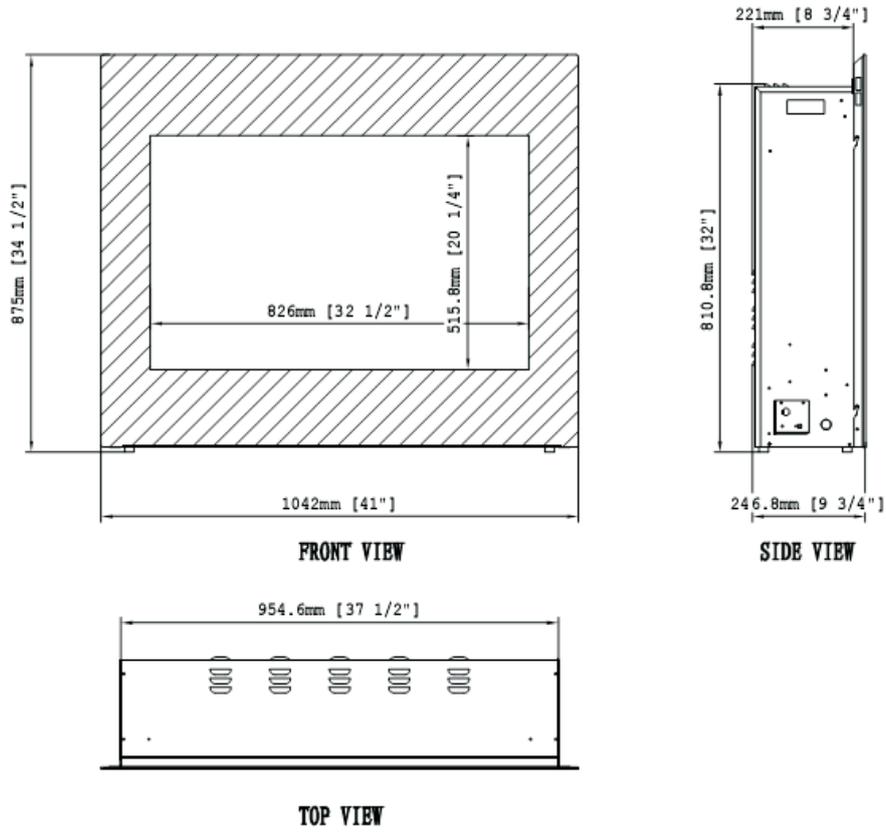


Figure 7 ZECL-39-4134 dimensions

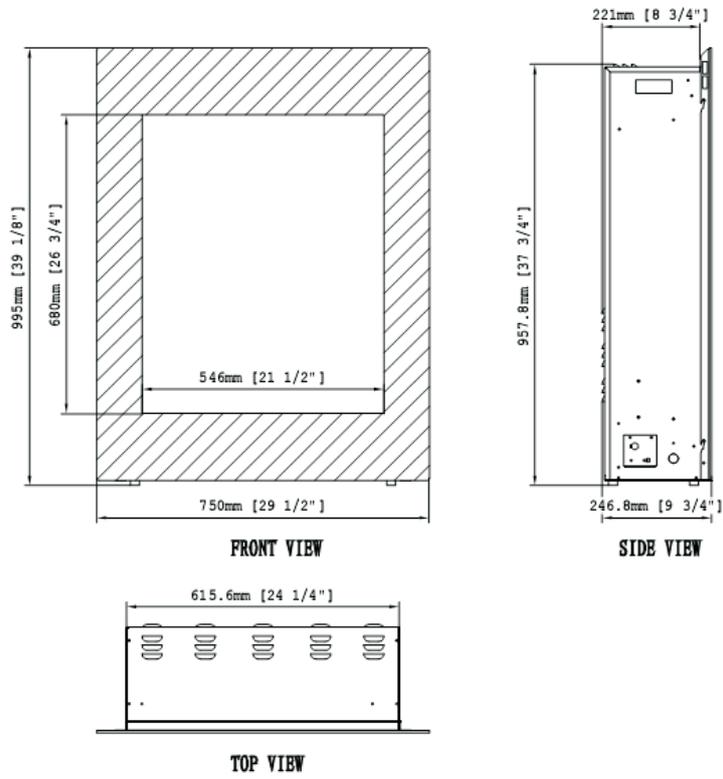


Figure 8 ZECL-2939 dimensions

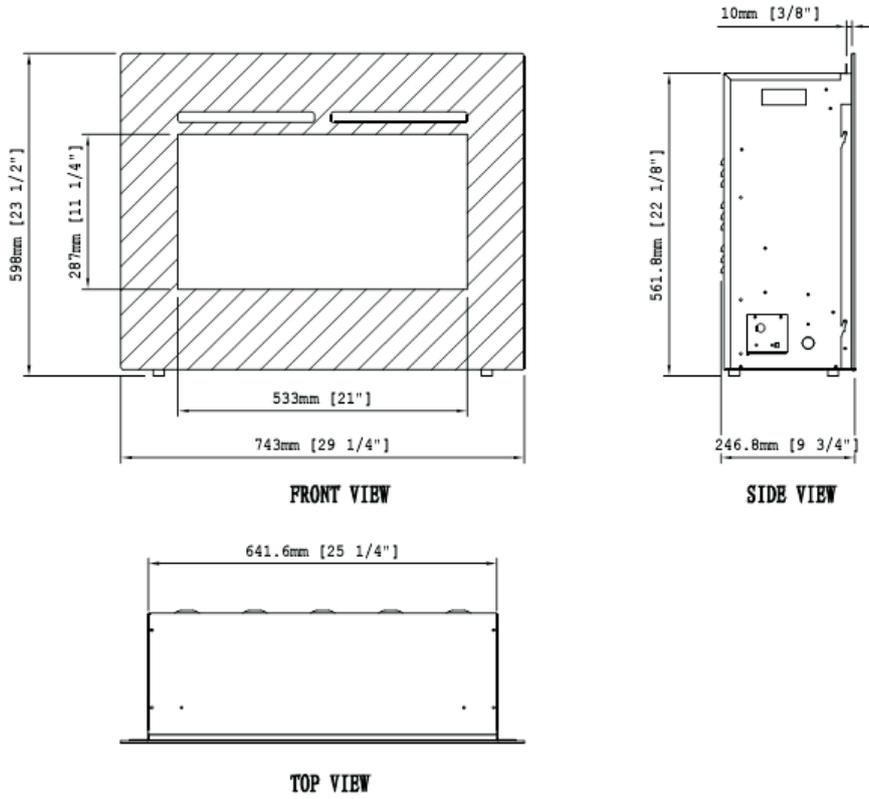


Figure 9 ZECL-26-FLUSHMT dimensions

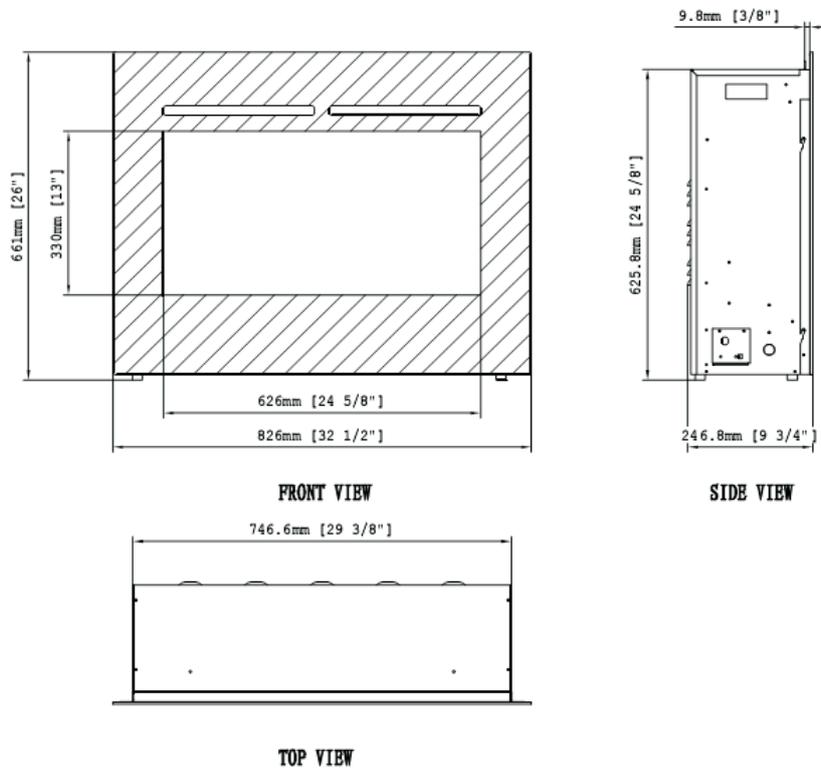


Figure 10 ZECL-30-FLUSHMT dimensions

Locating FIREPLACE

⚠WARNING: Never locate this heater where it may fall into a bathtub or any water container.

NOTICE: Minimum and maximum clearances must be maintained at all times. Illustrations throughout these instructions reflect typical installations and are for design purposes only. Actual installations may vary slightly due to individual preferences.

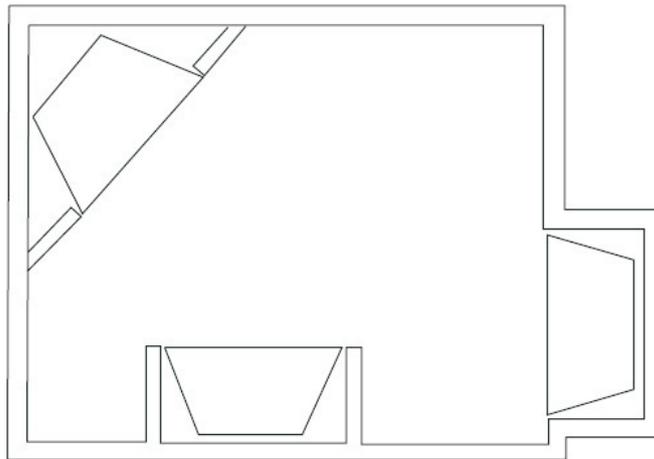


Figure 11 Heater Locations

Figure 8 illustrates a variety of ways the heater may be located in a room. The heater may be installed directly on the floor, carpet or raised on a hearth.

WARNING: RISK OF FIRE. MAINTAIN ALL SPECIFIED AIR SPACE CLEARANCES TO COMBUSTIBLES. FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE A FIRE OR CAUSE THE APPLIANCE TO OVERHEAT. ENSURE ALL CLEARANCES (I.E. BACK, SIDE, TOP, VENT MANTEL, FRONT, ETC.) ARE CLEARLY MAINTAINED.

APPLIANCE VENTS LOCATED ON THE FRONT AND BACK OF THIS ELECTRIC APPLIANCE CANNOT IN ANY WAY BE COVERED AS IT MAY CREATE A FIRE HAZARD.

WHEN USING PAINT OR LACQUER TO FINISH THE MANTEL, THE PAINT OR LACQUER MUST BE HEAT RESISTANT TO PREVENT DISCOLOURATION.

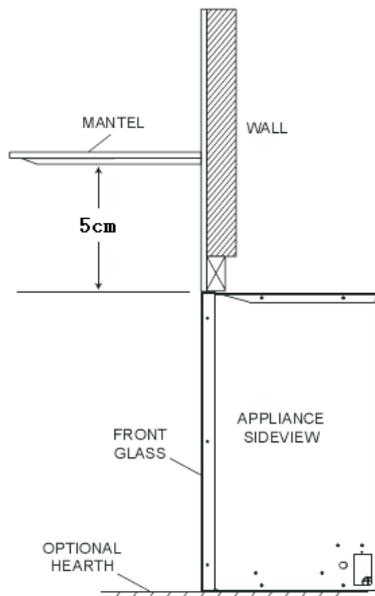


Figure 12

The minimum distance from the top of the appliance that the mantel can be installed is 5cm, at any depth. The sides and back are 1cm.

UNPACKING AND TESTING FIREPLACE

Carefully remove the unit from the box. Prior to permanently installing the unit, test it to make sure it operates properly. To do this, plug the unit's power supply cord into a 120-volt grounded outlet.

INSTALLATION

⚠ CAUTION: The unit's power supply cord must be connected to a properly grounded and protected 120-volt outlet. Always use ground fault protection where required by the electrical code.

⚠ WARNING - RISK OF FIRE! To prevent a possible fire, do not block the air intake or exhaust in any manner.

⚠ WARNING - RISK OF FIRE! The power cord must not be pinched or placed against a sharp edge. Secure the cord to avoid tripping or snagging thus reducing the risk of fire, electric shock or personal injury. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners or similar items. Arrange the cord away from traffic areas where it could be tripped over.

Once the mantel has been prepared, the fireplace can be installed.

Select a suitable location that is not susceptible to moisture and is away from drapes, furniture and high traffic areas.

Note: Follow all national and local electrical codes. This insert can be installed into an existing mantle or as a new construction.

1. Unplug the unit and turn the power switch to the "ON" position.
2. Push the fireplace into the mantel.
3. Plug the fireplace into a 15amp/120V, grounded outlet.

Note: Unscrew and remove the screws on both sides of the unit before you place the fireplace into the mantel.

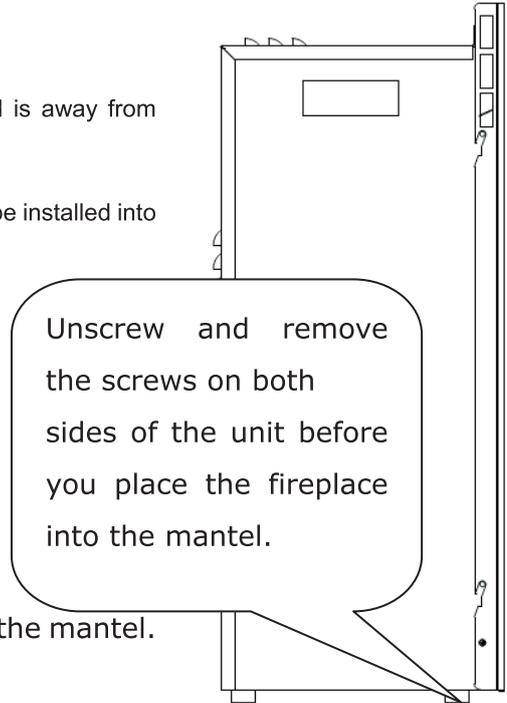


Figure 13 The location of the screw

OPERATING INSTRUCTIONS

A: REMOTE CONTROL OPERATION

The power switch and control panel are located behind the front glass .

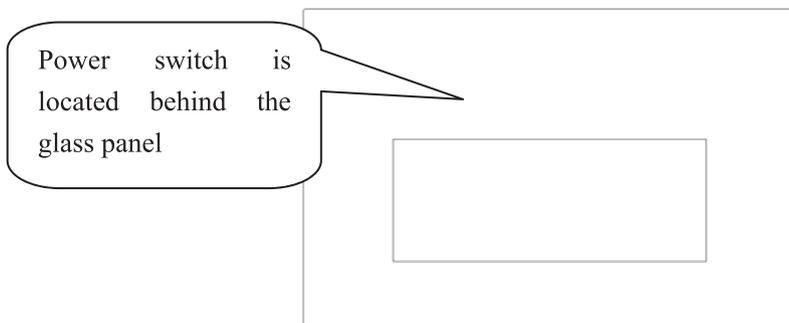


Figure 14 The location of power switch

1. For remote to function make sure the heater is plugged-in and main power switch located on the upper left hand side behind the front glass is at position **I**.

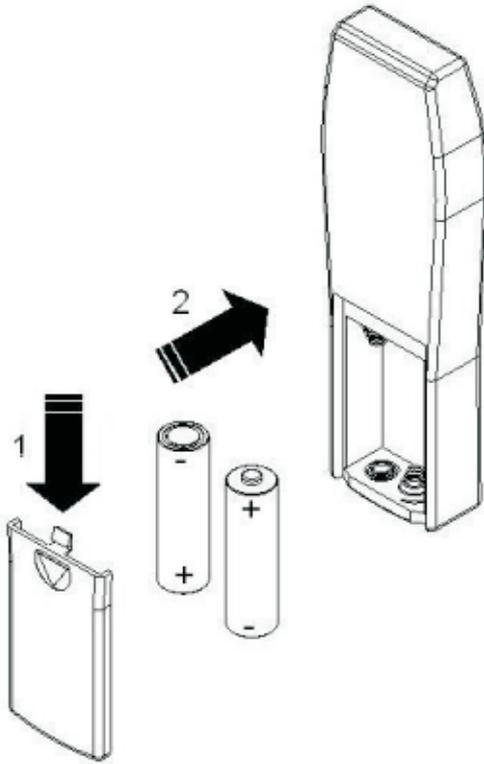


Figure 15

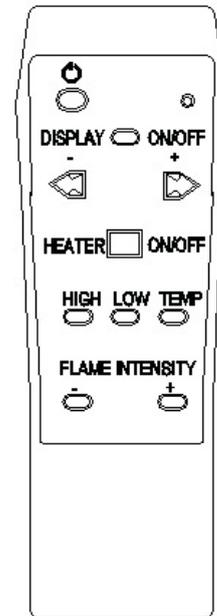


Figure 16

Note. The heating and flame function can only be operated by the remote control.
The remote control needs 2 AA batteries (not included).

Note: When the heater is turned on for the first time, it may release a slight, harmless odor. This odor is a normal occurrence caused by the initial heating of the internal heating elements and should not occur after the initial burn off. (This odor may occur again if dust or debris has been trapped in the unit.)

2. When operating the remote make sure you point the remote to the centre of the heater unit and make sure each time you press the button the LED indicator located on top right hand corner of the remote blinks. If the LED fails to blink check the batteries. It takes some time for the receiver to respond to the transmitter. Do not PRESS the buttons more than once within two seconds for correct operation.

3. Power on  button: The power – on button at top left corner of the remote is the mains ON/ OFF power button. This will turn off all the functions and the heater will be in standby mode.

4. Flame Power On button " **DISPLAY ON OFF**": This button controls both the ember and flame effect.
Once the flame effect is ON use the + and – buttons as explained below to adjust the flame brightness

as desired. Press this button again to turn OFF the flame effect.

a. The – or + buttons control the brightness of EMBER.

To increase the brightness of ember bed, press and release the + button. Each time you press this button the brightness will increase by a small amount, until the maximum is reached.

To decrease the brightness of ember bed, press and release the – button. Each time you press this button the brightness will decrease by small amount, until the minimum brightness is reached.

b. The FLAME INTENSITY– or + buttons control the brightness of FLAME.

To increase the brightness / flame height, press and release the + button. Each time you press this button the brightness will increase by a small amount, until the maximum is reached.

To decrease the brightness / flame height, press and release the – button . Each time you press this button the brightness will decrease by small amount, until the minimum brightness is reached. You can mix the ember and the flame to create a realistic flame effect.

5. Heater On/off button: This button is the heater ON / OFF button. Press this button to turn the heater ON. The heater will always start at high heat setting 1500W. To turn OFF the heater press this button again.

HIGH button: Press the high button to switch the heater to high heat setting 1500W.

LOW button: Press the low button to switch the heater to LOW heat setting 750W.

TEMP button: Press the TEMP button to switch the heater to AUTO mode. Under this mode the heater will operate in similar way as explained below for the manual operation.

6. To turn off the heater unit completely press the  button once.

Notice: To work the remote control it must be within about 6 meters of the fireplace and not too far off to either side.

Important! If the flame does not activate after the POWER ON/OFF button is pressed, press the DISPLAY ON/OFF button to activate the flame. If the flame does not appear, repeat steps as above.



WARNING: Before undertaking maintenance or replacing the light bulb(s) or interchanging the reflection panel(s) always disconnect the heater from the electricity supply by removing the 3 pin plug and allowing the heater to cool.

NOTICE: This remote control must remain within 26 ft. (8 m) of the fireplace to be effective.

NOTICE: Do not mix old and new batteries.

Note: Make sure your batteries are fully charged and installed correctly in your remote control.

B: MANUAL OPERATION

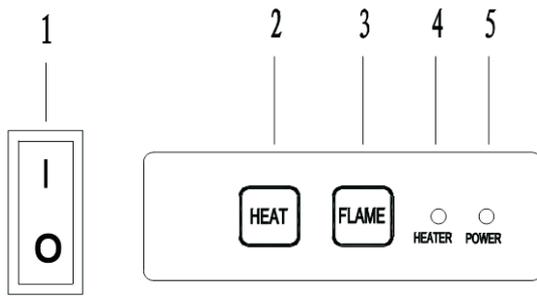


Figure 17 The panel control

1. Power ON/OFF switch, 2. Heat control button, 3. Flame control button, 4. HEATER LED, 5. POWER LED

Plug the heater into a suitable outlet

1) "Power ON/OFF"

Set this switch to position **I** to turn the product ON. Setting it to **O** to turn the product OFF. When unit is turned ON the fireplace Power LED will be illuminated.

2) "Heat control button"

Press the HEAT button repeatedly to set the heater to desired heat setting. The heater indicator LED will glow which shows the current heater setting.


HEATER INDICATOR LED RED –1500W HEAT OUTPUT

HEATER INDICATOR LED BLUE—750W HEAT OUTPUT

HEATER INDICATOR LED PURPLE—AUTO MODE

AUTO MODE

Under this mode the heater will automatically turn ON at high heat setting 1500W heat output when the room temperature drops below 22 °C. When the room temperature is between 22-25°C the heater output will switch to low heat setting 750W. When the room temperature goes above 25°C the heater will be turned off and the cycle will continue. The LED indicator will be PURPLE in colour under this mode.

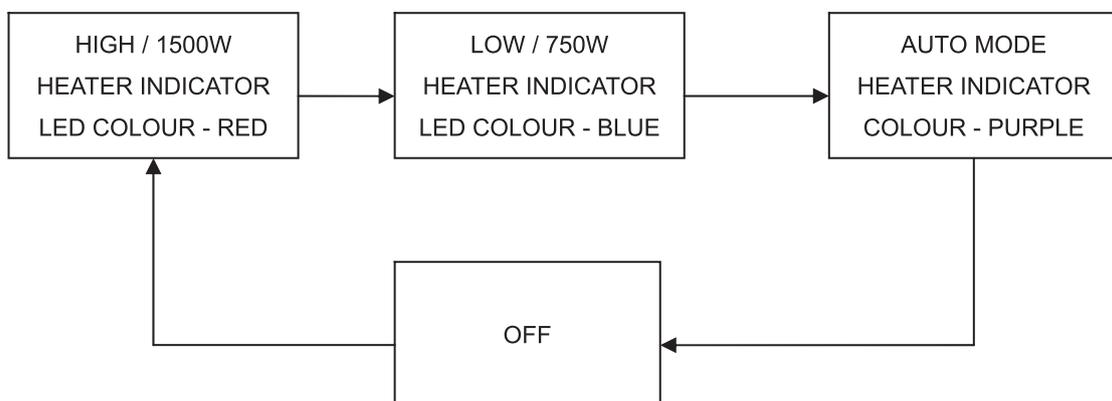

3) "Flame control button"

Press the Flame brightness adjustment button to adjust the flame height and ember bed brightness. Press and release the FLAME control button to cycle through LO, MED, HI and OFF.

HARD-WIRE INSTALLATION

Warning: ENSURE ALL POWER IS TURNED OFF BEFORE HARD WIRING THIS APPLIANCE.

HARD WIRING CONNECTION

If it is necessary to hard wire this appliance, a qualified electrician may remove the cord connection, and wire the appliance directly to the house hold wiring.

This appliance must be electrically connected and grounded in accordance with local codes, if hard wired. In the absence of local codes, use the current CSA C22.1 CANADIAN ELECTRICAL CODE in Canada or the current ANSI/NFPA 70 NATIONAL ELECTRICAL CODE in the United States.

- A. Unscrew two screws shown in the below left figure. Remove the cover and the power cord fix piece, remove power cord.
- B. Insert external hard wire through the power cord hole and link to the junction box.
- C. Put the plate back and screw back.

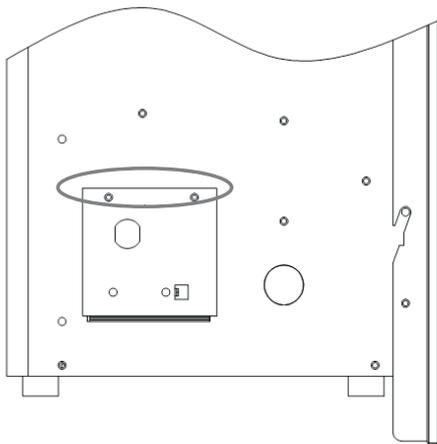


Figure 18 Hard wire

FIRE GLASS MEDIA INSTALLATION

BEFORE YOUR INSTALLATION

CLEANING THE MEDIA: The media may contain a fine white dust that needs to be cleaned prior to installation. Clean the media with soap, drain, rinse thoroughly and dry before placing into the tray.

1. Unscrew four screws show in the figure 19. Take RH and LH highlight bracket out.
2. Take out the log.
3. Unplug the LED strip plug. Take the LED strip and the steel bracket out.
4. Choose the colour of Fire Glass Media you would like to use.
5. Place the Fire Glass Media into the Tray.

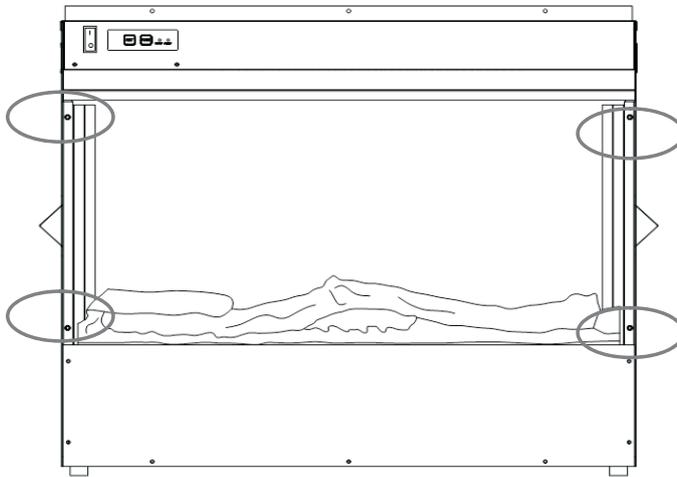


Figure 19 Take out the log

CLEANING AND MAINTENANCE

⚠ WARNING: Always disconnect the power and allow the heater to cool before performing any cleaning, maintenance or relocation. Turn the controls to OFF and remove the plug from the outlet or turn off the circuit breaker before attempting any cleaning.

FRONT GLASS


1. The glass is cleaned in the factory during assembly. During shipment, installation, handling, etc. the glass surface may collect dust particles. These can be removed by buffing lightly with a clean dry cloth.

2. To remove fingerprints or other marks, the glass can be cleaned with a damp cloth using a good quality household glass cleaner. The glass should be completely dried with a lint free cloth or paper towel.

3. In the event of glass breakage, vacuum all remaining glass pieces with a shop vac. DO NOT VACUUM WHILE THE PIECES ARE HOT. Replace glass only with replacement parts made specifically for this heater. Never substitute material. Only fully tempered soda lime safety glass may be used on this heater.

REPLACEMENT PARTS

REF NO	PART NO.	DESCRIPTION	REMARK
1	FRT60420	HEATER ASSEMBLY	
2	LRC8	CIRCUIT BOARD	
3	301506	REMOTE RECEIVER	
4	385506	3W LED ASSEMBLY	
5	LED-M1-10	LED STRIP FOR FLAME	
6	LED-M-2	LED STRIP FOR FLME	
7	LED-M2-10	LED STRIP FOR LOG	
8	LED-M3-2	LED STRIP FOR LOG	
9	LED-M1-12	LED STRIP FOR EMBER	
10	LED-M-12	LED STRIP FOR EMBER	
11	10105031B	REMOTE	
12	10101201	FLAME MOTE	
13	10104010	SWITCH	
14	10305506	LOG	ZECL/INSERT 26
	10305507	LOG	ZECL/INSERT 30
	10305508	LOG	ZECL/INSERT 33
	10305509	LOG	ZECL39
	10305510	LOG	ZECL2939
15	10701130	FRONT TEA GLASS	ZECL-26-2923
	10701131	FRONT TEA GLASS	INSERT-26-3825
	10701130B	FRONT TEA GLASS	ZECL-26-FLUSHMT
	10701132	FRONT TEA GLASS	ZECL-30-3226
	10701133	FRONT TEA GLASS	INSERT-30-4026
	10701132B	FRONT TEA GLASS	ZECL-30-FLUSHMT
	10701134	FRONT TEA GLASS	ZECL-33-3624
	10701135	FRONT TEA GLASS	INSERT-33-4230
	10701136	FRONT TEA GLASS	ZECL-39-4134
	10701137	FRONT TEA GLASS	ZECL-2939

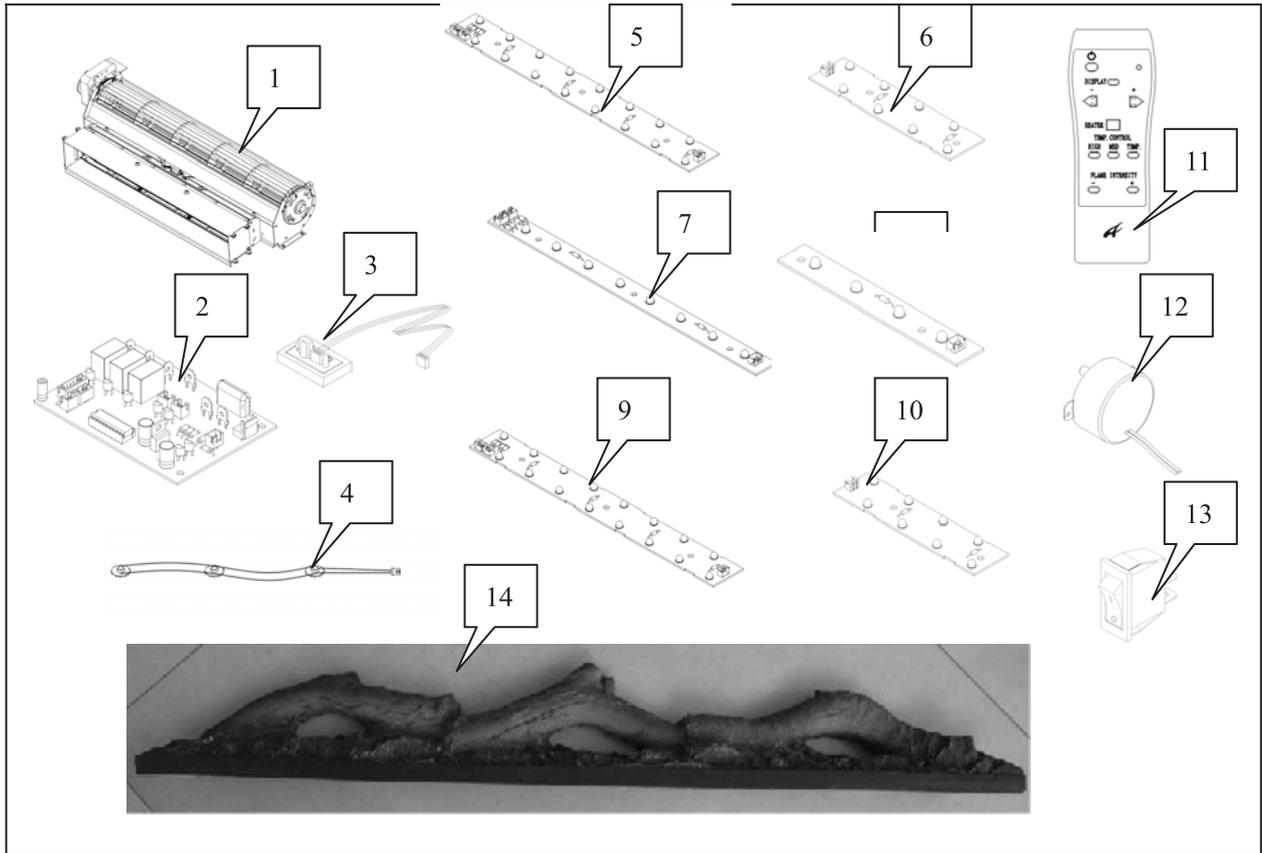

Remark: #15 Not show in upper figure.

TROUBLE SHOOTING

⚠ WARNING: Turn off the appliance and let it cool before servicing it.
Only a qualified service person should service and repair the heater.

OBSERVED PROBLEM	POSSIBLE CAUSE	REMEDY
Fireplace turns off and will not turn on	Fireplace has overheated and safety device has caused thermal switch to disconnect or home circuit breaker has opened	Reset switch by turning main power switch off and waiting five minutes, then turning it back on
Log set and/or ember is dark	Wiring is loose	Inspect wiring for loose connections and repair or replace if necessary
Flame is not moving	Flame motor is defective	Call a qualified service technician

Remote control does not work	Low Batteries Power switch is in OFF position	Replace AA batteries in remote control Turn on the main power switch
Heater does not provide heat when turned on	Thermal switch has been tripped. Circuit breaker has been tripped	Turn the unit off and unplug the unit for five minutes. Plug back in and turn the unit on. If plug can not be reached, follow directions for tripped circuit breaker Turn off circuit breaker that supplies electricity to the unit .Wait five minutes then flip circuit breaker back on.

WARRANTY

Amantii Imports Corp. ("Amantii") warrants that your newly purchased Amantii electric fireplace is free from manufacturing and material defects for a period of one (1) year from the date of the first purchase, subject to the conditions and limitations contained below.

Warranty Application & Exclusions

This limited warranty applies to your newly purchased Amantii electric fireplace; the limited warranty's application is limited to purchases made in any province of Canada or in any of the 52 States of the United States of America, including the District of Columbia. Only the original purchaser of the product is eligible for coverage under this limited warranty; the warranty is not transferable.

Products excluded from this limited warranty

Light bulbs are not covered by this limited warranty and are the sole responsibility of the owner/purchaser.

Warranty Coverage and Term

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such products to be free from defects in material and workmanship for a period of one (1) year from the date of the first purchase of such products.

The limited one (1) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

Limitations to Coverage Under Limited Warranty

This limited warranty does not apply to products that have been repaired, except by Amantii or its authorized service representatives, or otherwise altered. This limited warranty further does not apply to defects resulting from misuse, abuse, accident, neglect, incorrect installation, improper maintenance or handling, or operation with an incorrect power source.

Products made by other manufacturers, sold with the product or thereafter, are not covered by this limited warranty. The use of unauthorized components will render this warranty null and void.

Service Under Limited Warranty

Defects must be brought to the attention of Amantii Technical Service by contacting Amantii at (1-888-406-8764), or at 1503 – 7088 18th Avenue, Burnaby, British Columbia, Canada, V3N 0A2. Please have your proof of purchase, catalogue/model and serial numbers available when calling; any and all service under the limited warranty requires a proof of purchase of the product.

Defects

Should a product or part covered by this limited warranty be proven to be defective, in material or workmanship, and during the one (1) year limited warranty period, Amantii will replace such defective product or part without charge. If Amantii is unable to replace such product, or if replacement is not commercially practicable or cannot be timely done, in its sole discretion Amantii may, in lieu of replacement, choose to refund the purchase price for such product or part.

Limitations

In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable to the purchaser or any third party, whether in contract, in tort, or on any other basis for any indirect, special, punitive, exemplary, consequential, or incidental loss, cost or damage arising out of or in connection with the sale, maintenance, use or inability to use the product, even if Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, have been advised of the possibility of such losses, costs or damages, or if such losses, costs or damages are foreseeable. In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable for any direct losses, costs or damages that exceed the purchase price of the product.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the purchaser.

Application of Provincial and State Law

This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sale of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

General

Amantii reserves the right to make changes at any time without notice, in design, material, specifications, prices and the right to discontinue styles and products.

Amantii

www.amantii.com

Date of Purchase:

Dealer Information:

