


Installation Instructions

Air Kit Morsø 3600/7110 For use in North America

Kit Contens:

- (1) Air duct adaptor
- (2) 3,5 X 6,5 mm sheet metal screws

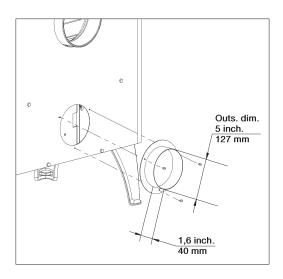

Installation:

- 1. Place adaptor flange against the shield aligning the three pre-drilled holes of the flange to the holes on the shield.
- 2. Install the three sheet metal screws securing the flange to the shield.
- 3. Installation is now complete. You may now connect your air duct to the stove.

Floor to center of the air collar: 12,8 inch (322 mm)

Right side of the unit to center of air collar: 14,6 inch (371 mm)

If you have any further questions, please contact your authorized Morsø dealer.